



Step 1 - Attach Leg to rail
screw in mending plate and angle bracket.

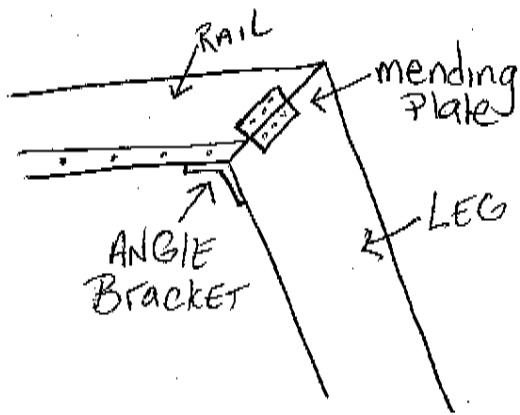

Step 2 - place rail to headboard^{leg} and
screw in mending plate and angle
bracket.

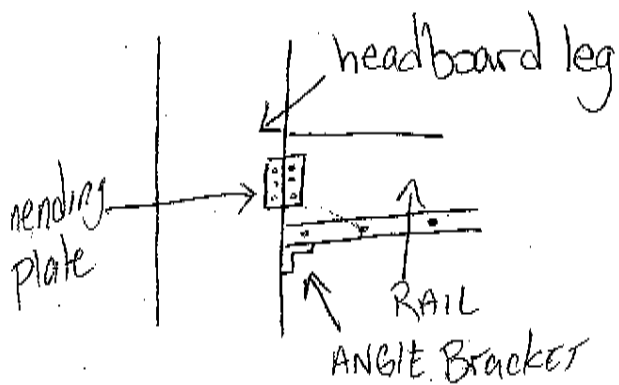

Step 3 - repeat steps 1 & 2 to create
other side of bed.

Step 4 - Attach plywood mattress board and screw into place inbetween both rails on top of 2x2 supports

Step 5 - Attach shelves. first shelf will be 12" from floor and the others are and equal distance up.

Step 6 - Attach headboard shelves 7 inches down from top.

Step 7 - Attach the 2x2 braces for the steps at 9" from bottom, check for square.

Step 8 - Attach safety rail spacer and safety rail.

Parts List

2- Headboard Posts 2" x 6" or 8". 69" Tall. With the Bookcase Headboard it will be 83" Tall. Pre notched. Includes the 2" x 2" ledge if the optional Double Bookcase is ordered.

2-Angled Rails for the Steps. 69" Long for the regular bed and 82" long for the 83" tall bed. Includes 2" x 2" for the Step Support.

2-Rails for the front and back. Includes a 2" x 2" ledge. Will be 75" long for the Twin and Full Size Beds. Will be 80" long for the extra long or Queen Size Beds. 83" for the Dorm XXL Bed.

2-Metal Mending Plates

2-Metal Angle Supports

2-Pcs of 3/4" Board for the mattress support.

2-Shelves 2"x6" or 2"x8" x Twin, Full or Queen Size. (Optional If Ordered)

4-Spacer for the safety rails.

2-Safety Rails 2" x 6" x 75" or 80" or 83"

4-Steps 2" x 6" x Twin, Full or Queen Size. Note: For the extra tall bed you will receive 5 Steps.

104-2-1/4" Course Drywall Screws.

2-3" Course Drywall Screws.

14-1" Course Drywall Screws.